

RAPPA™




INSTRUCTIONS FITTING A NEW WINCH HANDLE



FITTING

Remove the old winch handle (roll pin or bolt type).

Grease the biggest tread and screw on the handle base. Do this nearly all the way, NOT completely tight.

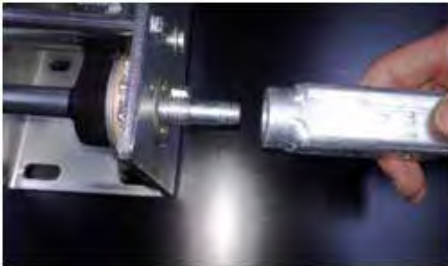

Locate the large end of the spring first and the start the nut. This part may be a little tricky.

Fit the handle and tighten the nut and bolt.



Using a 19mm deep socket tighten the nut to 35ft.lbs, whilst holding the shaft with grips.